

Door lock spring replacement for Land Rover Discovery 1 Range Rover Classic (Tail Gate)

Introduction



Struggling to unlock your Land Rover? Turning the key and pulling the handle to open your doors? Or fed up of holding up the latch to open the doors? The poor quality springs within your door lock mechanisms wear and can even snap causing these symptoms.

The springs within the door lock actuator mechanisms deteriorate over time, the OEM spring is made from cheap metal which wears quickly, this wear leads to the symptoms noted above.

Fit our improved design Stainless Steel Springs and restore your door locks to full

health for good.


Made from high quality Stainless Steel (will not deteriorate over time like springs offered by some others) our improved design thicker wound springs will restore your lock and will not deteriorate over time like the OEM part. Save the cost of a replacement actuator that will just fail again!

Range Rover MK1 Classic 1970-1996

Land Rover MK1 Discovery 1989-1998

X8R Ltd www.x8r.co.uk

Step 1: Remove door trim

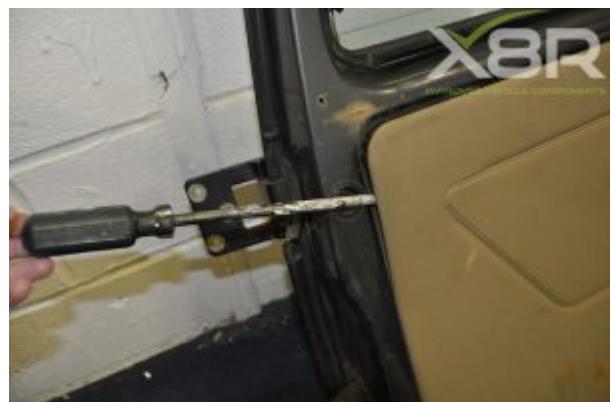

For instruction purposes only this repair is carried out on the bench, this repair

can and should be carried out in situ on the vehicle.

Remove the 6 screws and remove the speaker grill.

Remove the 4 screws and remove speaker trim.

Remove the 8 screws around the speaker / amp unit and remove.

Remove grab handle by unscrewing 2x 10mm bolts.

Remove the latch lever plastic surround by holding open the lever and unscrewing the screw underneath. Slide the plastic trim out.

Now prise away the door card, start at the base of the door and work around the trim until free.

Step 2: Remove linkages





Remove all linkage rods.

Step 3: Remove latch lever



Unscrew the latch lever and twist linkage out of position.

Step 4: Remove pivot point





Remove pivot point which prevents door lock mechanism removal.

Step 5: Remove lock mechanism



Remove screws retaining lock mechanism.

Remove lock mechanism from door.

Step 6: Fit new spring



Position lock as shown, you will see from image where spring should be located, remove remains of old spring if evident.

Fit the new spring in to the round hole first, using a small screw driver prise the other end in to the triangular hole.

Test the operation of the spring and reinstall

If you need any further guidance on this install or would like to purchase the parts shown please call us on +44 01843 446643 or email us at sales@x8r.co.uk.

Please also check out our instruction guide on YouTube.

www.x8r.co.uk

Installation is carried out at installers risk, if unsure please contact us or a professional, X8R Ltd cannot be held responsible for any adverse result of installing this product or any injuries caused by install, if in doubt ask a professional. All images and texts are copyright X8R Ltd 2016